

Europe

Italy

CHINT Italia Investment Srl

Add: Via Bruno Maderna 7 30174 Venezia Tel: +39 041.446614 Fax +39 041.5845900 E-mail: info@chint.it

Spain

CHINT Electrics S.L.

Add: Calle José Echegaray, Num 8.Parque Empresarial Las RozasEdifificio 3, Planta Baja, Ofificina 7-8.C.P: 28232 Las Rozas (Madrid) Tel: +34 91 645 03 53 E-mail: info@chint.eu

West Asia & Africa

CHINT Electrics (Egypt) Co., Ltd

Add: Building B16 - Smart village, Abu Rawash - Giza, Egypt Tel: +20 1097173769 P.O BOX: 00202 Email: chinteg@chintglobal.com

Kenya

ZHENGTAI ELECTRICS(KENYA) CO., LIMITED

Add: OFFICE 1A, 8TH FLOOR, KISM TOWERS, LR No. 209/945/1– NGONG ROAD – NAIROBI, KENYA Tel: +254 072256485 Email: chintkenya@chintglobal.com

North America

United States

NOARK Electric (USA) Inc

Add: 2188 Pomona Blvd., Pomona, CA 91768 Tel: 626-330-7007 Fax: 626-330-8035 E-mail: nasales@noark-electric.com

Czech Republic

NOARK Electric Europe s.r.o.

Add: Sezemická 2757/2, 193 00 Prague 9 Tel: +420 226 203 120 Email: europe@noark-electric.com

Turkey

CHINT Turca Elektrik Sanayi VE Ticaret Anonim Sirketi

Add: Zumrutevler Mahallesi Ural Sokak No. 22/18 NAS PLAZA B Block KAT 1, Maltepe, Istanbul Tel: +90216 621 00 55 E-mail: fatura@chint.com.tr

U.A.E CHINT MIDDLE EAST AND AFRICA DMCC

Add: Unit No: 2101, 21085,2109, Jumeirah business center 1, Cluster G, Jumeirah Lakes Towers, Dubai, UAE Tel: +97145571532 P.O BOX: 337555 E-mail: global-sales@chint.com

Nigeria

CHINT POWER & ENERGY SERVICES CO., LIMITED

Add: 3RD FLOOR TOWER 2, CHURGATE BUILDING , VICTORIA ISLAND, LAGOS Tel: +234 8110728119 E-mail: czjie@chintglobal.com

Mexico

CHINT SOLAR MEXICO S DE RL DE CV

Add: Miguel Cervantes Saavedra 169 Piso 11 Col. Granada Del. Miguel Hidalgo C.P. 11520 CDMX, México Tel: +52 1-55-8881-6127 E-mail: info@chint-mexico.com



CHINT GLOBAL PTE. LTD.

Tel: +86-21-5677 7777 **Web**: www.chintalobal.com

A **CHNT** COMPANY













Series Automatic Transfer Switching Equipment

NXZ Series Automatic Transfer Switching Equipment

General	P-001
Model definition and description	P-002
Functions and characteristics	P-003
Mode of connection of the main part and controller	P-008
Overall and installation dimension	P-012

NXZ(H)B/NXZ(H)M Series Automatic Transfer Switching Equipment

General	P-014
Model definition and description	P-016
Functions and characteristics	P-017
Mode of connection of the main part and controller	P-023
Overall and installation dimension	P-029



NXZ **Series Automatic Transfer Switching Equipment**

1. General

1.1 Scope of Application

1.1.1 NXZ series Automatic Transfer Switching Equipment is applicable to the three-phase four-wire duplicate supply power grid of AC 50Hz, rated voltage 400V/415V and below, and rated current up to 630A. It can automatically connect one or several load circuits from one power source to the other to ensure the normal power supply for the load circuit.

1.1.2 This product is applicable to industrial and commercial power use places, high-rise buildings, and residential houses.

1.2 Applicable standards

1.2.1 Product standard

IEC 60947-1.

IEC 60947-6-1.

1.2.2 Standards for use in extreme environment

IEC 60068-2-1. (Low Temperature)


IEC 60068-2-2. (High Temperature)

IEC 60068-2-30. (Cyclic Damp Heat)


IEC 60068-2-11. (Salt mist) 1.2.3 Certification: CB、CE、KEMA

1.3 Normal working conditions



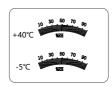



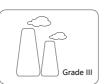

1.3.1 Ambient temperature

5° C~+40° C; Users can custom-tailor relevant product to be used in the environment of -25° C~+70° C, and use the product according to the temperature compensation table.

1.3.2 Sea level elevation

Equal to 2000m or below; if it needs to work above 2000m altitude, it shall be used according to the table of capacity reduction of different altitudes.

1.3.3 Atmospheric conditions

The relative humidity shall not exceed 50% when the surrounding air temperature is +40° C; the relative humidity can be higher when the temperature is lower; the average monthly maximum relative humidity in the wettest month is 90%, and the average monthly minimum temperature shall be +20 ° C. Special measures may be necessary in cases of occasional condensation due to variations in temperature.

1.3.4 Pollution degree: class 3

1.3.5 Installation category

Installation category of the switching equipment of main circuit

Installation category of auxiliary circuit is category III. Installation category of conversion controller is category II.

1.3.6 Utilization category: AC-33B

Electromagnetic compatibility (EMC) Electrostatic discharge (IEC 61000-4-2) Level 2

Radio-frequency electromagnetic field-radiated electromagnetic field immunity (IEC 61000-4-3) Level 3,


Fast transient bursts (IEC 61000-4-4) Level 3,

Surges (IEC 61000-4-5) Level 3,

Radio-frequency electromagnetic field-conducted immunity (IEC 61000-4-6) Level 3,

Radiation grade (CISPR11) grade B,


2. Model definition and description

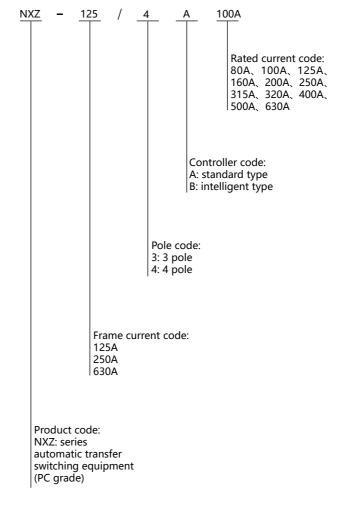

Type selection example:

NXZ-125/4A 125A: To order an Automatic Transfer Switching Equipment of which the frame current is 125A, number of poles is 4P, rated current is 125A, with a standard controller Note: when the controller is installed in split type, the split wire needs to be ordered separately.

Structural Features of the Automatic Transfer Switching Equipment

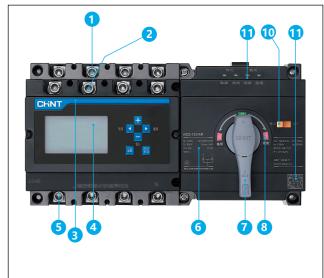

- Terminal on the normal supply side
- Terminal on the alternative supply side
- 3 Trade mark
- 4 Display and operation module of the controller
- Terminal on the load side
- Nameplate
- 7 Handle
- 8 Switching-off/switching-on indicator
- QR Code
- 10 Manual/electric dial switch
- 11 Controller processing module

Comparison Table of Frame Current and Rated Current

Rated current (A)		80	100	125	160	200	250	315	320	400	500	630
	125	•	•	•								
Frame current (A)					-	-	•					
	630									•		


Technical parameters of NXZ (Class PC)

Model	NXZ-125	NXZ-250	NXZ-630
Electrical characteristics	·		
Frame current (A)	125	250	630
Rated current (A)	80,100,125	160,200,250	315,320,400,500,630
Rated operational voltage Ue (V)	400/415 50Hz		·
Rated insulation voltage Ui (V)	AC800		
Rated impulse withstand voltage Uimp (kV)	8		
Utilization category	AC-33B		
Number of poles	3P/4P		
Rated conditional short-circuit current Iq (kA)	100		
Rated short-circuit making capacity lcm (kA)	20	30	50
Rated short time withstand current lcw/0.2s (kA)	10	10	25
Contact transfer time (S)	0.6× (1±50%)	1× (1±10%)	1.5× (1±10%)
Operating transfer time (S)	1.2× (1±10%)	2.1× (1±10%)	3.3× (1±10%)
Mechanical endurance (times)	8500	7000	3000
Electrical endurance (times)	1500	1000	1000
Overall dimension			
Width x height x depth (mm)	245×130×126	295×175×175	430×272×230
Controller characteristics			
Controller model	A type (standard), B type (intelligent)		
Installation mode	Integrated, split		
Rated control power supply voltage Us (V)	230/240 50/60Hz		
Control voltage range	85%~110%Ue		

Parameters of controller

Model Function	A type (standard)	B type (intelligent)
Manual/automatic transfer		
Main contact positions		
Normal position		
Alternative position		
Off-position		
Automatic control		
Normal supply of monitoring	 Phase failure/loss of voltage, undervoltage, overvoltage fault 	 Phase failure/loss of voltage, undervoltage overvoltage fault
Alternative supply of monitoring	 Phase failure/loss of voltage, undervoltage, overvoltage fault 	 Phase failure/loss of voltage, undervoltage overvoltage fault
Automatically transfer and restore operation		
Automatically transfer and nonautomatically restore operation		
Grid-grid		
Grid-generator		
Phase failure/loss of voltage transfer		
Under voltage transfer		
Over voltage transfer		
Delay adjustable		
Transfer delay	0s~300s adjustable	0s~300s adjustable
Return delay	0s~300s adjustable	0s~300s adjustable
Generator control		
Fire control linkage		
Indication		
Switching-on/switching-off/Off-position indication		
Normal/alternative supply indication		
Parameter setting indication		
Others		
Communication function	-	
Display module	■LED	■LED


Operation interface of the display module of controller

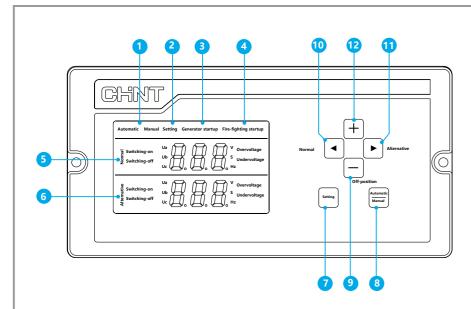

- 1. Indication of automatic/manual operation mode
- 2. Setting status indication
- 3. Indication of the startup signal of generator
- 4. Indication of start of the fire control linkage function
- 5. Display area of the status parameters of normal supply: Display the voltage parameters and Transfer delay time of normal supply in working state; display the setting item parameters in setting state;
- 6. Display area of the status parameters of alternative supply: Display the voltage parameters and return delay time of alternative supply in working state; display the setting item parameters in setting state;
- 7. Setting button (press this button to enter the parameter setting menu of the controller);
- 8. Automatic/manual transfer mode selector button: used for selection of automatic/manual transfer mode in normal working state; used for save and exit in setting state;
- 9. Off-position button: under the manual control mode, any one of the two power supply is normal, press this button to make automatic transfer switching equipment on off-position; Under setting mode, this button is used to decrease value in parameter setting;
- 10. Normal supply transfer button: under the manual control mode, the switch is on alternative position, press this button to switch on normal supply; under setting mode, this button is used for pageup in parameter setting;
- 11. Alternative supply transfer button: under the manual control mode, the switch is on normal position, press this button to switch on alternative supply; under setting mode, this button is used for pagedown in parameter setting;
- 12. + button:Under setting mode, this button is used for increase value in parameter setting.

Parameter setting of the display module of controller

Figure 1

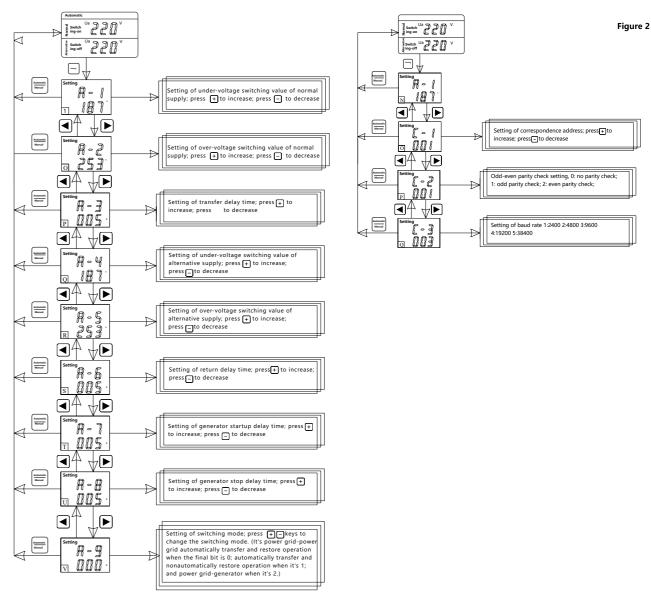

Note: The functional parameters of the display module and communication module are set as follows:

Setting of under-voltage switching value: Default to 187V, user-settable 160V~200V;

Setting of over-voltage switching value: Default to 263V, user-settable 240V~290V;

Transfer delay setting:Default to 5s, user-settable 0s~300s;

Return delay setting: Default to 5s, user-settable 0s~300s;

Generator startup delay setting: Default to 5s, user-settable 0s~300s;

Generator stop delay setting: Default to 5s, user-settable 0s~300s;


Switching and power source mode:Default setting: automatically transfer and restore operation (grid - grid), and user can set automatically transfer and nonautomatically restore operation (grid - grid), automatically transfer and restore operation (grid - power generation)...

Default parameter setting for communication function: address: 1; Baud rate: 9600bps; parity check bit: odd parity; data bit: 8; stop bit: 1

Press setup key to enter the setting interface when the controller is working. Press " 🔊 " to page up or down the setting menu. Press manual/automatic key to exit from the setting menu. Press " [+] " " [-] " to revise the parameters.


Parameter setting of communication function (note: please ask for the communication agreement from our after-service staff)

Controller action flow

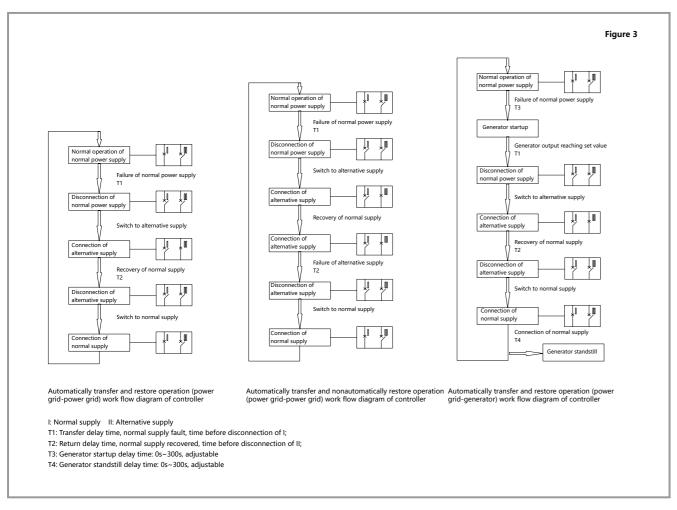

Padlocking function

Padlock apertureΦ5~Φ8 (mm)

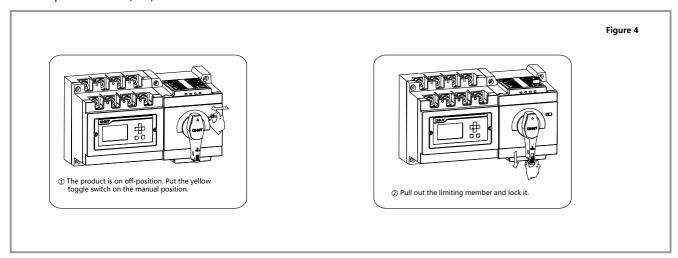


Communication function

Modbus protocol; RS485 interface.


6. Mode of connection of the main part and controller

Product incoming mode: upper incoming

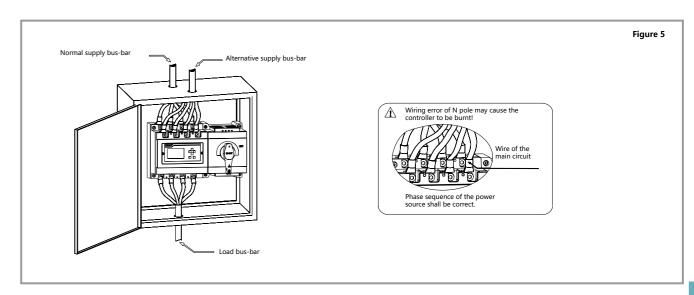

Installation mode: vertical or horizontal


Product wiring

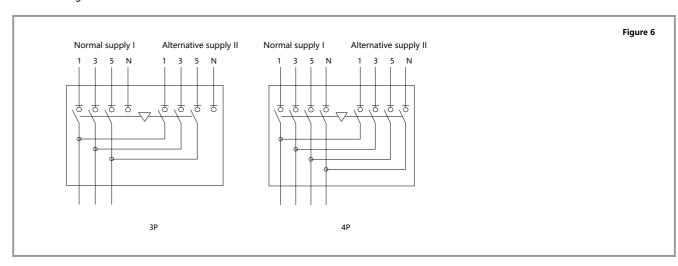


P

7. Mode of connection of the main part and controller

Wire connection

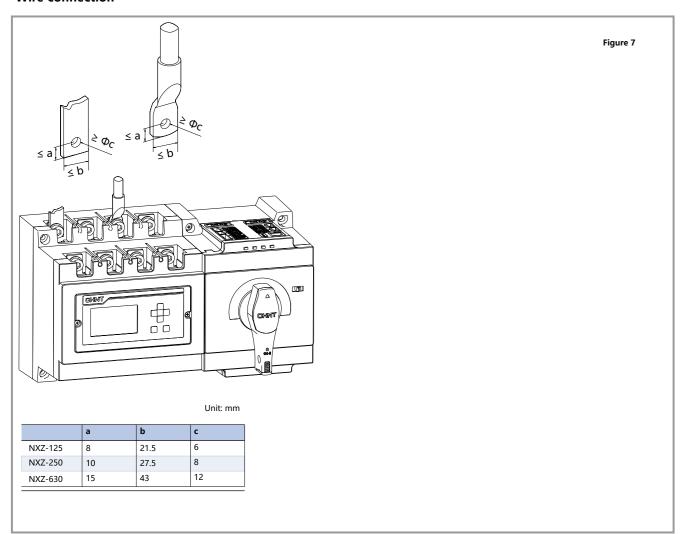



Split type installation of the display module (cabinet)

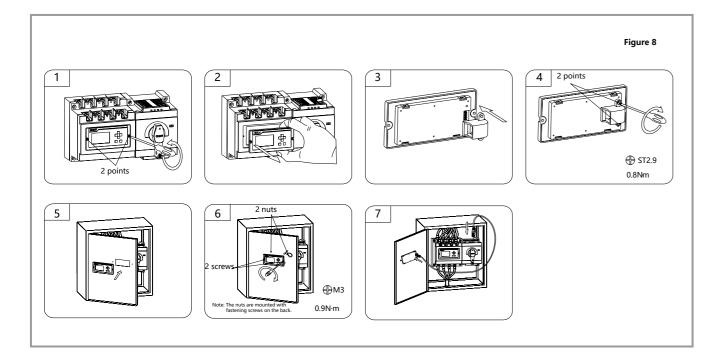


Wiring of signal and control terminal

A type controller

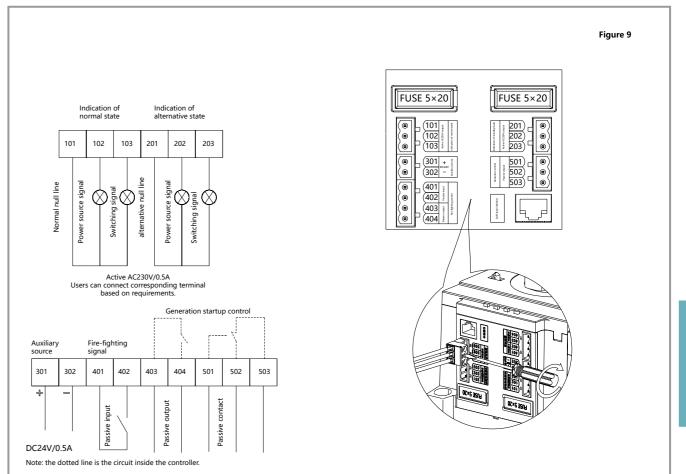

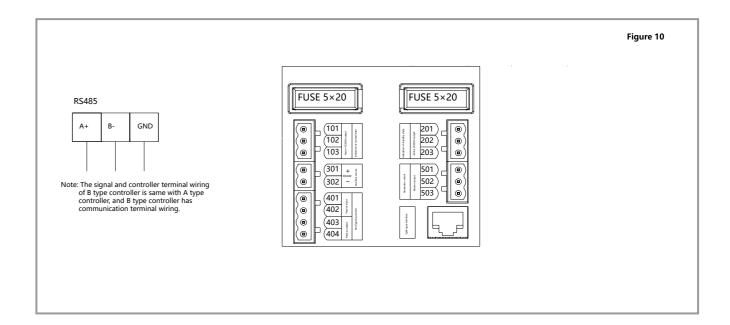


Typical application

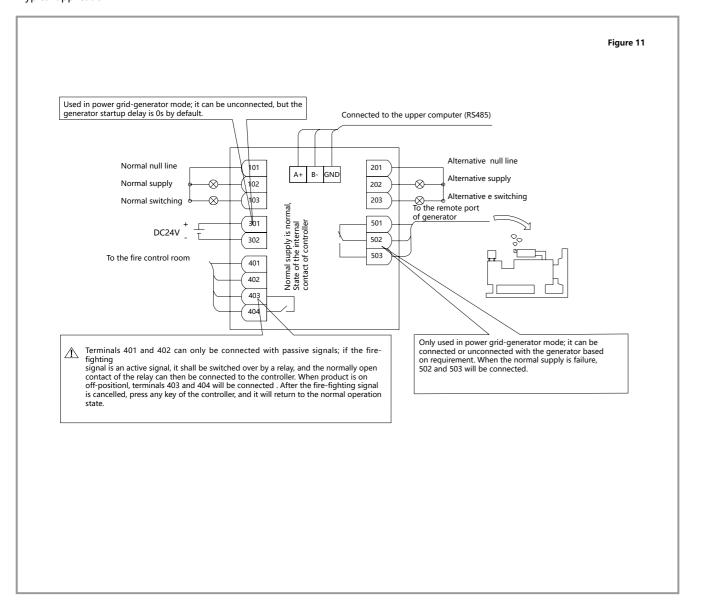


9. Overall and installation dimension

Product overall and installation dimension

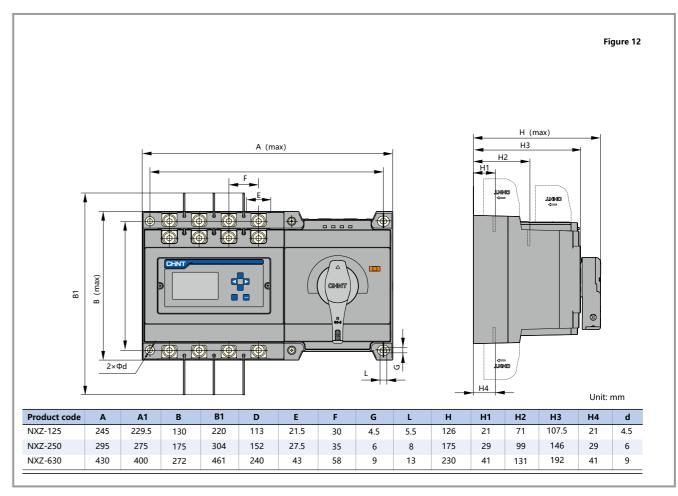


Hole size of the product installation plate

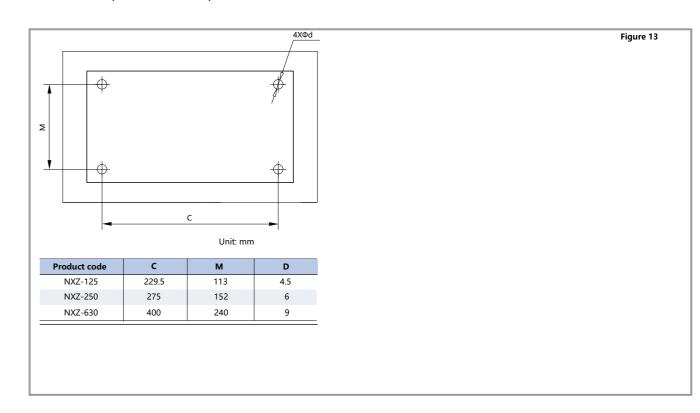


10. Overall and installation dimension

Overall dimension of split type module (unit: mm)

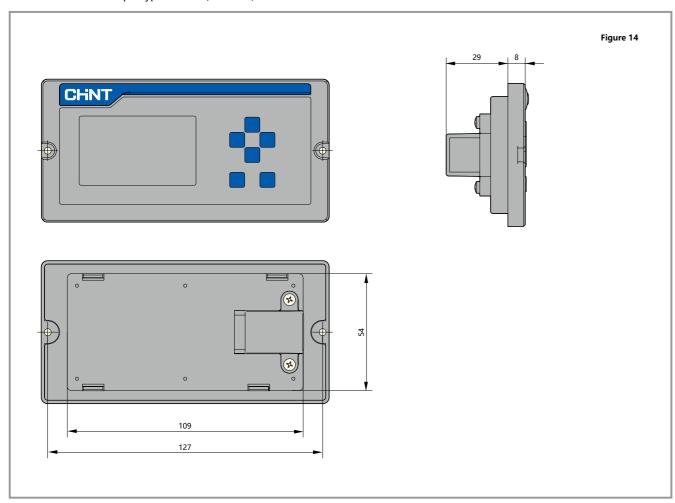

Size of the installation cabinet of split type module (unit: mm)

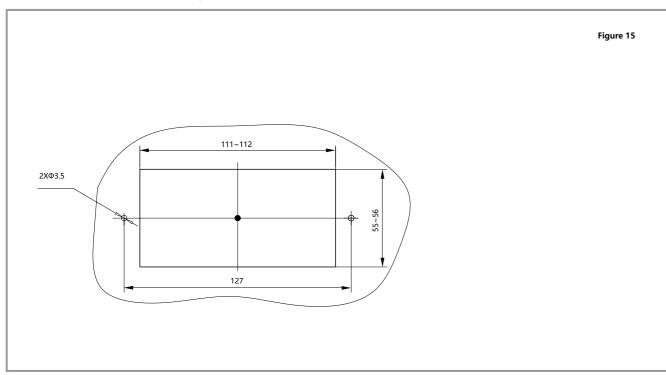




NXZ(H)B、NXZ(H)M **Series ATS**


1. General

- 1.1 Scope of Application
- 1.1.1 NXZ(H)B/NXZ(H)M Series Automatic Transfer Switching Equipment is applicable to three-phase four-wire duplicate supply grid of AC 50/60Hz, rated voltage 400V/415V and below, rated current 800A, and can switch one or several load circuits from one power source to the other to ensure the normal power supply of the load circuit.
- 1.1.2 This product is applicable to industrial and commercial power use places, high-rise buildings, and residential
- 1.2 Applicable standards
- 1.2.1 Product standard IEC 60947-1. IEC 60947-6-1.
- 1.2.2 Standards for use in extreme environment IEC 60068-2-1. (Low Temperature) IEC 60068-2-2. (High Temperature) IEC 60068-2-30. (Cyclic Damp Heat) IEC 60068-2-11. (Salt mist)

1.3 Normal working conditions

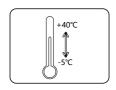



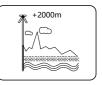



1.3.1 Ambient temperature

-5° C~+40° C; Users can custom-tailor relevant product to be used in the environment of -25° C~+70° C, and use the product according to the temperature compensation table. 1.3.2 Sea level elevation


Equal to 2000m or below; if it needs to work above 2000m altitude, it shall be used according to the table of capacity reduction of different altitudes.


1.3.3 Atmospheric conditions


The relative humidity shall not exceed 50% when the surrounding air temperature is +40° C; the relative humidity can be higher when the temperature is lower; the average monthly maximum relative humidity in the wettest month is 90%, and the average monthly minimum temperature shall be +20° C. Special measures may be necessary in cases of occasional condensation due to variations in temperature.

1.3.4 Pollution degree: class 3



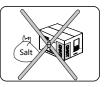

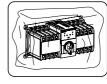

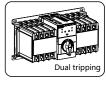

1.3.5 Installation category

Installation category of the switching equipment of main circuit is category IV.

Installation category of auxiliary circuit is category III. Installation category of conversion controller is category II.

1.3.6 Utilization category:

NXZB: AC-33iB NXZHB: AC-33B NXZ (H) M: AC-33B

1.3.7 Electromagnetic compatibility (EMC) Electrostatic discharge (IEC 61000-4-2) Level 2 Radio-frequency electromagnetic field-radiated electromagnetic field immunity (IEC 61000-4-3) Level 3, Fast transient bursts (IEC 61000-4-4) Level 3, Surges (IEC 61000-4-5) Level 3, Radio-frequency electromagnetic field-conducted immunity (IEC 61000-4-6)

Level 3, Radiation grade (CISPR11) grade B,

2. Model definition and description

NXZB-63 (Class CB)

NXZM (Class CB)

NXZB -	63 H / 4 A T C 63	NXZM - 250 H / 4 A 2 160A
	Rated current code: 10A、16A、20A、25A、 32A、40A、50A、63A	Rated current code: 10A~800A
	Tripping type code: C: C type D: D type	Function code: Empty: power distribution protection 2: generator protection
	Function code: Empty: no communication function T: communication function Controller code: A: standard type C: intelligent type	Controller code: A: standard type B: intelligent type Pole: 3: 3 poles 4: 4 poles
	Pole: 3: 3 poles 4: 4 poles	Breaking capacity code: S: standard H: higher
	Breaking capacity code: S: 6kA H: 10kA Frame current code: 63A	Frame current code: 63A、125A、 160A、250A、 320A、400A、 630A、800A
	code: eries automatic transfer ng equipment	Product code: NXZM: automatic transfer switching equipment

Type selection example:

NXZB-63H/4C C63:To order a class CB automatic transfer switching equipment, the frame current is 63A, number of poles is 4P, the breaking capability is 10kA, rated current is 63A, the tripping type is C type, with an intelligent controller (C type).


Type selection example:

NXZM-250H/4A 160A:To order a class CB automatic transfer switching equipment, the frame current is 250A, number of poles is 4P, H breaking capability, rated current is 160A, with a standard controller (A type) and generator protection.

Comparison Table of Frame Current and Rated Current

Rated current	(A)	10	16	25	32	40	50	63	80	100	125	160	180	200	225	250	315	320	350	400	500	630	700	800
	63	•	-	-	•	•	-	•																
Frame current	125							•	•	•	•													
	160										•	-												
(A)	250											•	•	•	•	•								
	320															•		•						
	400															•	•		•	•				
	630																			•	•	•		
	800																					•	•	•

NXZHB-63 (Class PC) NXZHM (Class PC)

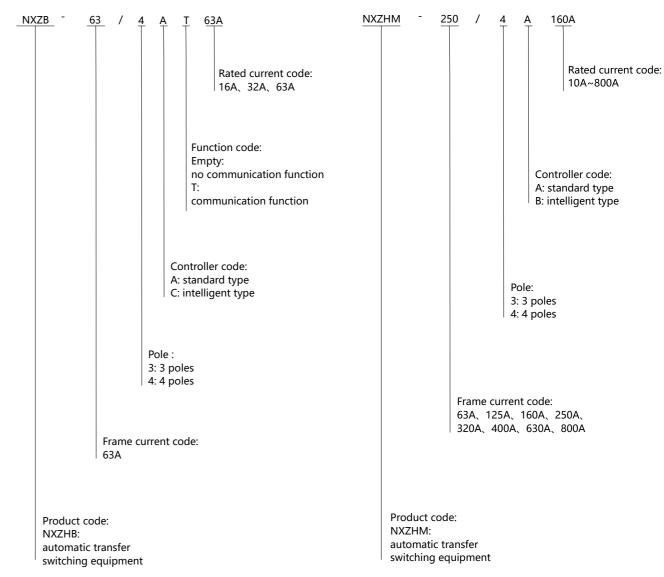

Type selection example:

NXZHB-63/4A 63A:To order a PC grade automatic transfer switching equipment, the frame current is 63A, number of poles is 4P, rated current is 63A, with a standard controller (A type).

Type selection example:

NXZHM-250/4A 250A:To order a PC grade automatic transfer switching equipment, the frame current is 250A, number of poles is 4P, rated current is 250A, with a standard controller (A type)

Comparison Table of Frame Current and Rated Current

Rated current	(A)	10	16	25	32	40	50	63	80	100	125	160	180	200	225	250	315	320	350	400	500	630	700	800
Frame current	63	•	-	•	•	•	•	-																
	125							•	•	•	•													
	160										•	-												
(A)	250											•	•	•	•	•								
	320															•		•						
	400															•	•		•	-				
	630																			-	-	-		
	800																					•	•	-



P-017 Series ATS | NXZ(H)B, NXZ(H)M

NXZ(H)B、NXZ(H)M | Series ATS P-018

3. Functions and characteristics

Technical parameters of NXZB-63 (class CB)

Model	NXZB-63S	NXZB-63H
Electrical characteristics		
Execution body	NXB-63	NXB-63H
Frame current (A)	63	63
Rated current (A)	10, 16, 20, 25, 32, 40, 50, 63	10, 16, 20, 25, 32, 40, 50, 63
Rated operational voltage Ue (V)	400	400
Rated insulation voltage Ui (V)	500	500
Rated impulse voltage Uimp (kV)	4	4
Utilization category	AC-33iB	AC-33iB
Number of poles	3P、4P	3P、4P
Rated short-circuit making capacity Icm (kA)	9.18	17
Rated short-circuit breaking capacity Icn (kA)	6	10
Tripping curve type	C, D	C, D
Mechanical endurance (times)	10000	10000
Electrical endurance (times)	3000	3000
Controller characteristics		
Controller model	A type (standard), C type (intelligent)	
Operating transfer time (s)	1.4× (1±10%)	
Controller installation mode	Built in	
Rated control power source voltage Us(V)	230 50Hz	
Control voltage range	85%Ue~110%Ue	

Technical parameters of NXZM (class CB)

Model	NXZM-63	NXZM-125	NXZM-16	0 NXZM-250	NXZM-400	NXZM-630	NXZM-800
Electrical characteristics							
Execution body	NXM-63	NXM-125	NXM-160	NXM-250	NXM-400	NXM-630	NXM-800
Frame current (A)	63	125	160	250	400	630	800
Rated current (A)	10, 16, 25, 32, 40, 50, 63	63, 80, 100, 125	125, 160	160, 180, 225, 250	200, 250, 315, 350, 400	400, 500, 630	630, 700, 800
Rated operational voltage Ue (V)	400/415 50Hz						
Rated insulation voltage Ui (V)	AC800	AC800	AC800	AC1000	AC1000	AC1000	AC1000
Rated impulse voltage Uimp (kV)	8				12		
Use type	AC-33B						
Number of poles	3P、4P						
Rated short-circuit making	S: 52.5	S: 52.5	S: 73.5	S: 73.5	S: 105	S: 105	S: 105
capacity Icm (kA)	H: 105	H: 105	H: 105	H: 105	H: 154	H: 154	H: 165
Rated short-circuit breaking	S: 25	S: 25	S: 35	S: 35	S: 50	S: 50	S: 50
capacity Icn (kA)	H: 50	H: 50	H: 50	H: 50	H: 70	H: 70	H: 75
Mechanical endurance (times)	10000	10000	8000	6000	4000	4000	4000
Electrical endurance (times)	2000	2000	2000	2000	1500	1500	1000
Controller characteristics							
Controller model	A type (standard	l), B type (intellige	nt)				
Operating transfer (s)	2.8 × (1±10%)	2.8 × (1±10%)	3.3 × (1±10%)	3.3 × (1±10%) 3.3	3 × (1±10%) 3.5 × (1	±10%) 3.5 × (1±10	0%) 4 × (1±10%)
Installation mode	Integrated, split						
Rated control power source	230/240 50Hz						
voltage Ue(V)	230/240 3002						
Control voltage range	85%~110%Ue						

Technical parameters of NXZHB-63 (class PC)

Model	NXZHB-63
Electrical characteristics	
Frame current (A)	63
Rated current (A)	16, 32, 63A
Rated operational voltage Ue (V)	400
Rated insulation voltage Ui (V)	500
Rated impulse voltage Uimp (kV)	4
Utilization category	AC-33B
Number of poles	3P、4P
Rated conditional short-circuit current Iq (kA)	100
Mechanical endurance (times)	10000
Electrical endurance (times)	1500
Controller characteristics	
Controller model	A type (standard), C type (intelligent)
Operating transfer (s)	1.4× (1±10%)
Controller installation mode	Built in
Rated control power source voltage Ue(V)	230 50Hz
Control voltage range	85%Ue~110%Ue

Technical parameters of NXZHM (class PC)

Model	NIV7N4 63	NV714 405	NOTE 45	0 10/714	250	NV714 400		W714 630	NV714 000
	NXZM-63	NXZM-125	NXZM-16	0 NXZM-	-250	NXZM-400	, N	IXZM-630	NXZM-800
Electrical characteristics									
Execution body	NXM-63	NXM-125	NXM-160	NXM-2	50	NXM-400		IXM-630	NXM-800
Frame current (A)	63	125	160	250		400	6	30	800
Rated current (A)	10, 16, 25, 32, 40, 50, 63	63, 80, 100, 125,	125, 160	160, 18 225, 25	80, 200, 50	250, 315, 35 400	-	00, 500, 30	630, 700, 800
Rated operational voltage Ue (V)	400/415 50Hz								
Rated insulation voltage Ui (V)	AC800	AC800	AC800	AC1000)	AC1000	А	C1000	AC1000
Rated impulse voltage Uimp (kV)	8					12			
Utilization category	AC-33B								
Number of poles	3P、4P	3P、4P	3P、4P	3P、4P		3P、4P	3	P、4P	3P、4P
Rated conditional short-circuit	100	100	100	100		100	1	00	100
current Iq (kA)	100	100	100	100		100	'	00	100
Mechanical endurance (times)	10000	10000	8000	6000		4000	4	000	4000
Electrical endurance (times)	2000	2000	2000	2000		1500	1	500	1000
Controller characteristics									
Controller model	A type (standard	l), B type (intellige	nt)						
Operating transfer (s)	2.8 × (1±10%)	2.8 × (1±10%)	3.3 × (1±10%)	$3.3 \times (1\pm10\%)$	3.3 × (1	±10%) 3.5 × (1±10%)	3.5 × (1±10%) 4 × (1±10%)
Installation mode	Integrated, split	:							
Rated control power source	230/240 50Hz								
voltage Us(V)	230,240 30112								
Control voltage range	85%~110%Ue								




Functional parameters of NXZ (H) B controller

Model	A type (standard)	C type (intelligent type)
Function	A type (standard)	C type (intenigent type)
Manual/automatic transfer	•	•
Main contact positions		
Normal position		
Alternative position	•	•
Off-position	•	•
Automatic control		
Normal supply of monitoring	$\blacksquare \ Phase failure/loss of voltage, under voltage, overvoltage fault$	■ Phasefailure/lossofvoltage,undervoltage,overvoltagefault
Alternative supply of monitoring	$\blacksquare \ Phase failure/loss of voltage, under voltage, overvoltage fault$	$\blacksquare \ Phase failure/loss of voltage, under voltage, overvoltage fault$
Automatically transfer and restore operation	•	•
Grid-grid	•	•
Phase failure/loss of voltage transfer	•	•
Undervoltage transfer	•	•
Delay adjustable	•	•
Transfer delay	0s~30s adjustable	0s~30s adjustable
Return delay	0s~30s adjustable	0s~30s adjustable
Generator control	-	•
Fire control linkage	•	•
Fire control feedback	•	•
Indication		
Switching-on/switching-off/dualtrippingindication	•	•
Normal/alternative supply indication	•	•
Parameter setting indication		
Others		
Communication function	Optional	•


Table of main functional parameters of NXZ (H) M controller

Model	A type (standard)	B type (intelligent)
Function	A type (standard)	b type (intelligent)
Manual/automatic transfer	•	•
Main contact positions		
Normal position	•	•
Alternative position	•	•
Off-position	•	•
Automatic control		
Normal supply of monitoring	■ Phasefailure/lossofvoltage,undervoltage,overvoltagefault	■ Phasefailure/lossofvoltage,undervoltage,overvoltagefault
Alternative supply of monitoring	■ Phasefailure/lossofvoltage,undervoltage,overvoltagefault	■ Phasefailure/lossofvoltage,undervoltage,overvoltagefault
Automatically transfer and restore operation		•
Automatically transfer and nonautomatically		•
restore operation		
Grid-grid		•
Grid-generator	-	-
Phase failure/loss of voltage transfer		
Undervoltage transfer		•
Overvoltage transfer		•
Delay adjustable		•
Transfer delay	0s~180s adjustable	0s~180s adjustable
Return delay	0s~180s adjustable	0s~180s adjustable
Generator control	-	•
Fire control linkage		•
Fire control feedback Indication		
Switching-on/switching-off/off-position		
Normal/alternative supply indication		•
Parameter setting indication		
Fault tripping indication	•	•
Others		
Communication function	Optional	Optional
Display module	■LED	■LED

Functional description of NXZ (H) B

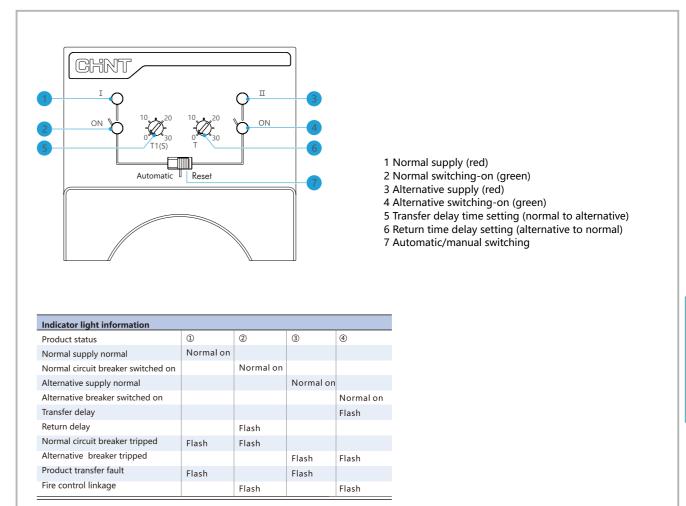

During line repair or fault-based maintenance, put the product on off-position, and then pull out the locking system of the handle, then lock it. The lock hole diameter is Φ 5.5.

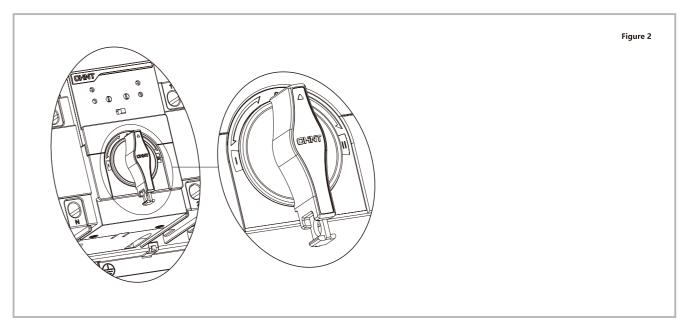


D

5. Functions and characteristics

Functional description of NXZ (H) M


Operation interface of the display module of controller

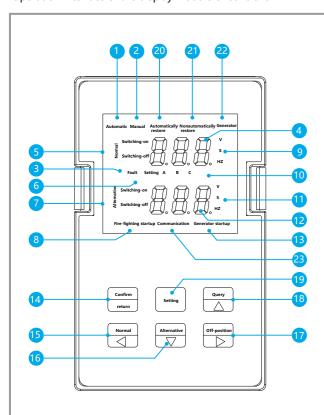

- 1 Indication of automatic operation mode:
- 2 Indication of manual operation mode;
- 3 Fault indication: This light will be on when switch fault or breaker tripping caused by load short circuit (class PC controller doesn' t have such function);
- 4 The display area of voltage parameters of normal supply shows the voltage parameters of normal supply and the transfer delay time during working, and
- 5 Indication of switching-on, switching-off for the normal supply; when normal supply is failure, indicator light of "normal" flash;
- 6 Setting status indication;
- 7 Indication of switching-on, switching-off for the alternative supply, when alternative is failure, indicator light of "alternative" flash;
- 8 Indication of startup of fire control linkage;
- 9 Voltage, time, and frequency unit for the normal supply
- 10 A, B. C phase;
- 11 Voltage, time, and frequency unit for the alternative supply;
- 12 The display area of voltage parameters of alternative supply shows the voltage parameters of alternative supply and the transfer delay time during working, and shows the symbol in setting mode;
- 13 Indication of generator startup;
- 14 Confirm/return button: It means saving and exit in setting mode; It means returning to the normal working state in fire control linkage mode;
- 15 Normal supply switching button: On the manual control mode, if the normal supply is normal, press this button to compulsorily switch to normal supply; On setting mode, this button is used for paging up;
- 16 Alternative supply switching button: On the manual control mode, if the alternative supply is normal, press this button to compulsorily switch to alternative supply; On setting mode, this button is used for paging down;
- 17 Trip button: On the manual control mode, if any one of the two power sources is normal, press this button to switch to the switching-off position; On setting mode, this button is used to decrease value in parameter setting:
- 18 Fault query button: when there is fault indication on the display screen, press this button to query the fault code; On setting state, this button is used to increase value in parameter setting;
- 19 Setting button: press this button to enter the parameter setting menu of the controller;
- 20 Indication of automatically transfer and restore operation mode;
- 21 Indication of automatically transfer and nonautomatically restore operation mode;
- 22 Indication of generator (automatically transfer and restore operation);
- 23 Indication of communication state.

Parameter setting of the display module of controller

Figure 3

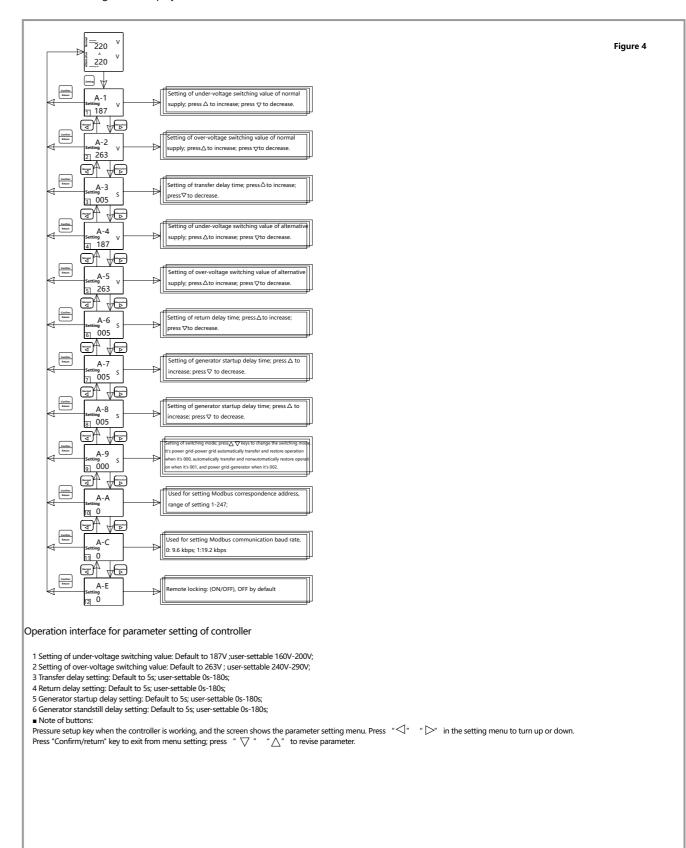



Mode of connection of NXZB and NXZHB

Product wiring

The incoming line is connected from the top of product; the outgoing line is connected from the bottom of product; the product can be installed vertically or horizontally.


Wiring as follows. The power phase sequence shall be correct; in particular, N pole shall not be wrongly connected.

The connecting wire (electric cable) adopts single core Polyvinyl chloride (PVC) insulated conductor or copper bar of the equivalent effect. Advice as follows:


Cross-sectional area of copper conductor

Safe ampacity (A)	20	25	32	40	50	63
Cross-sectional area of copper conductor (mm2)	2.5	4	6	10	10	16


3P product

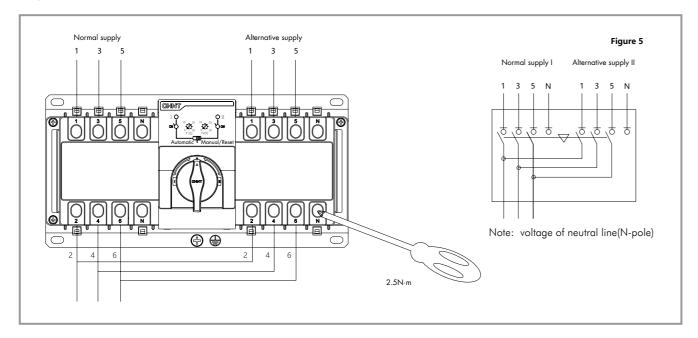

4P product

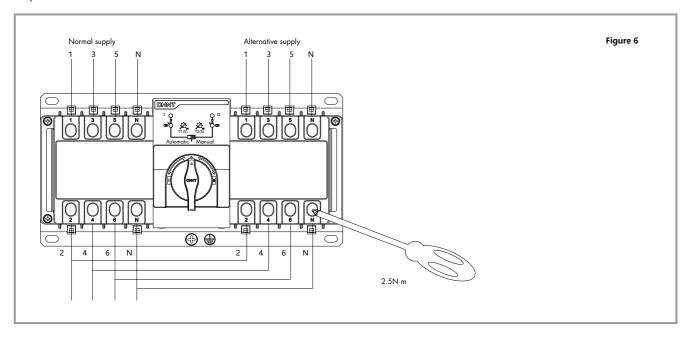


Signal and control terminal wiring

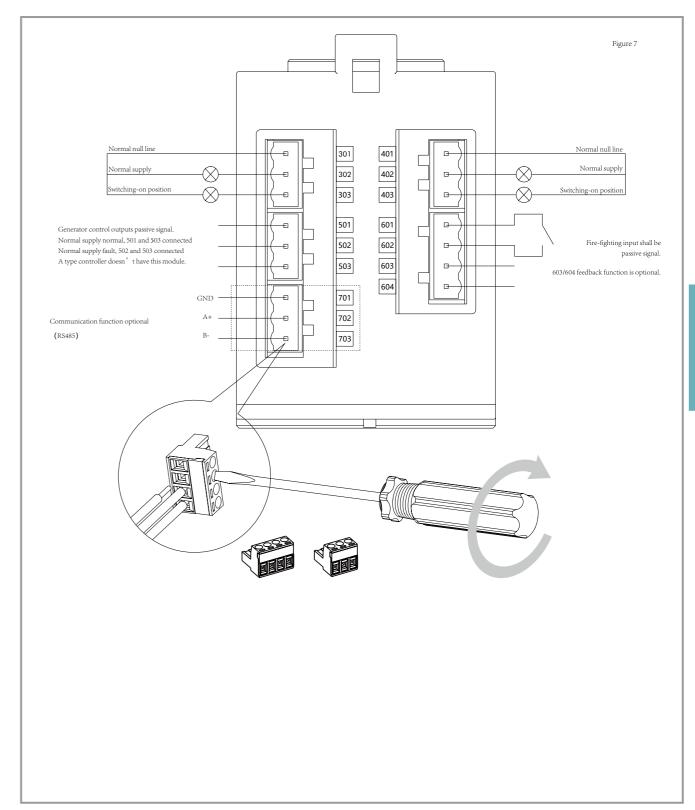


Mode of connection of NXZM and NXZHM


Product incoming line mode: incoming line at the top of product; outgoing line at the bottom of product Installation mode: vertically or horizontally

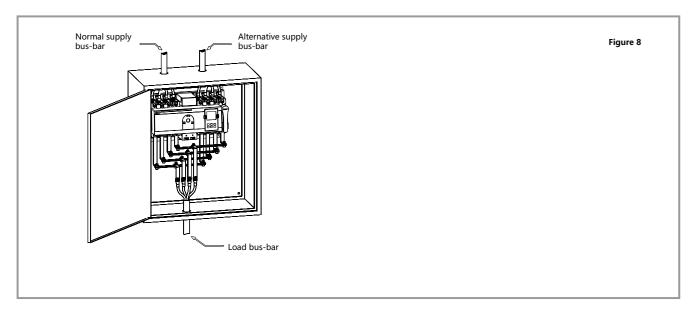


Product wiring

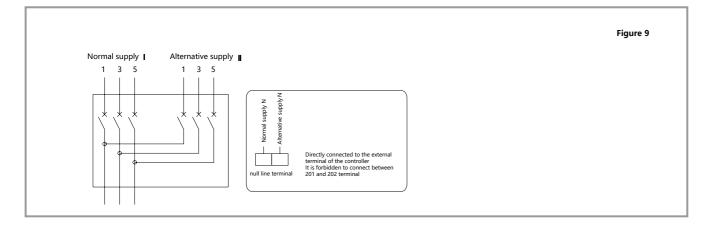

4P

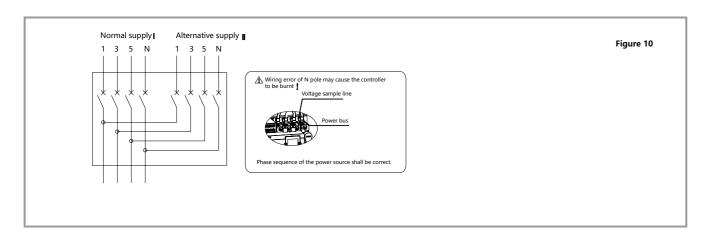


Wire connection

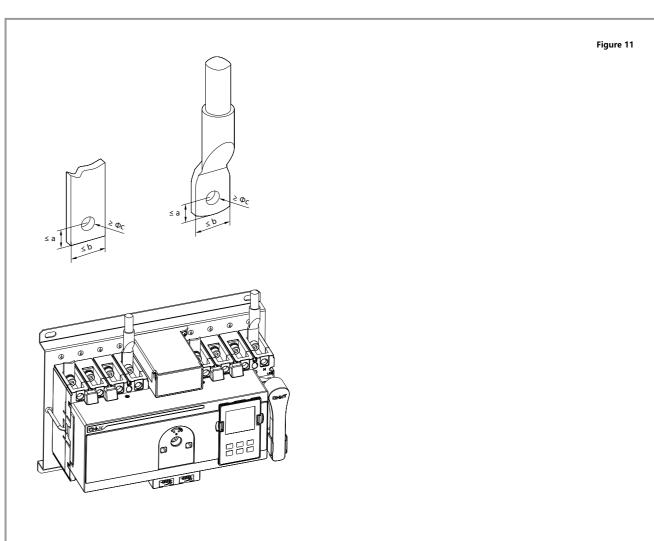


Unit:	mn

Product wiring	a	b	С
MXZ(H)M-63、125	8	17.5	6.5
MXZ(H)M-160	7.5	14.5	8.5
MXZ(H)M-250	10	23	8.5
MXZ(H)M-400、630	10.5	30.5	10.5
MXZ(H)M-800	15	43	14


Installation of interphase barrier

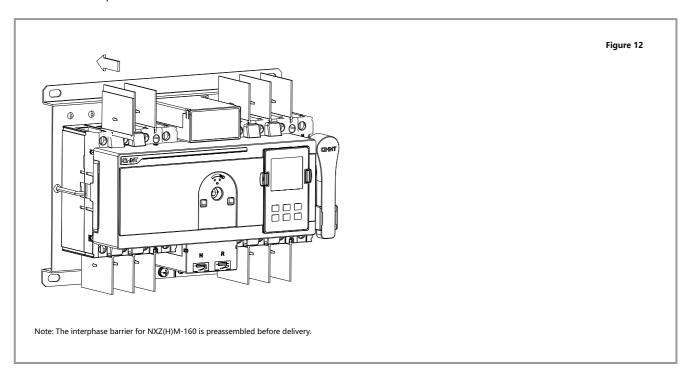

Split type installation of the display module (cabinet door)

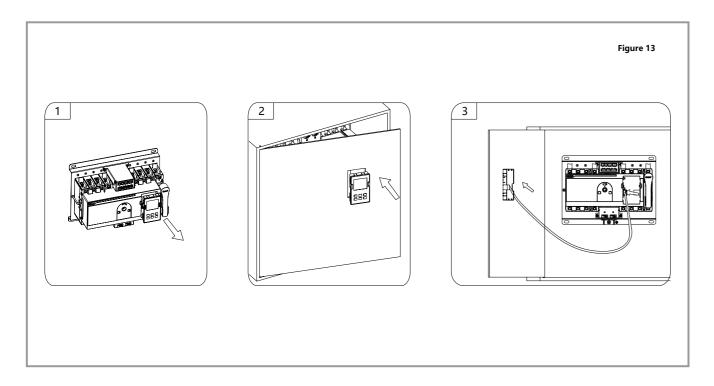


Signal and control terminal wiring

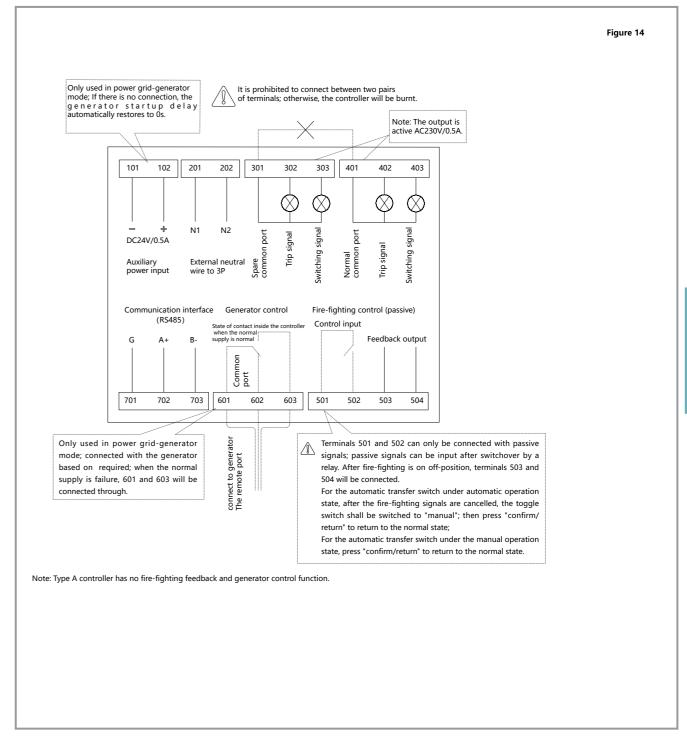

9. Overall and installation dimension


Overall and installation dimension of NXZB and NXZHB

Overall and installation dimension (the dimension of 3P product and 4P is the same)

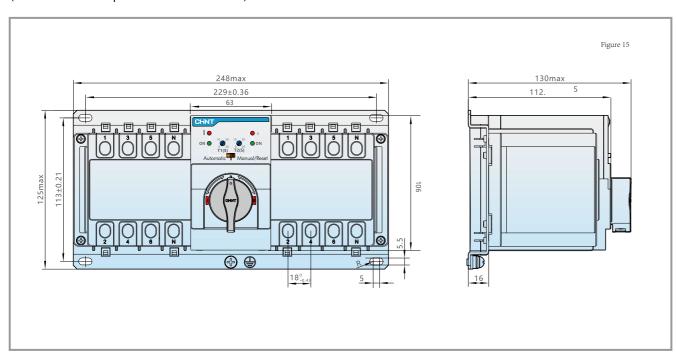


Overall and installation dimension of NXZM and NXZHM

Overall and installation dimension

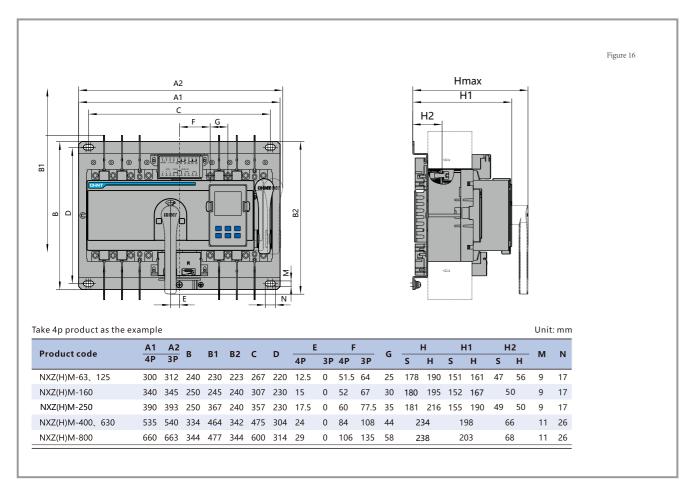

Overall dimension of split type module (unit: mm)

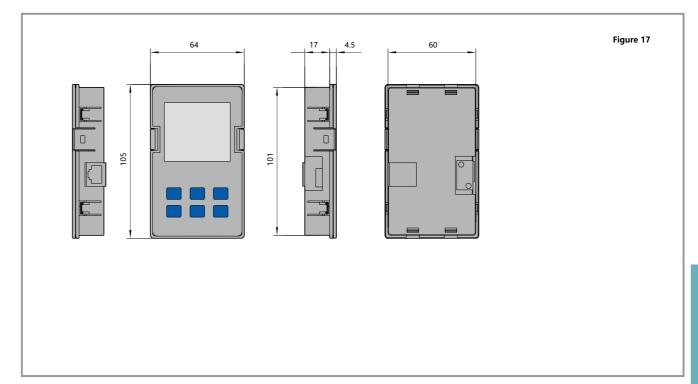

Note

Asia Pacific

China | Global HQ

Zhejiang CHINT Electrics Co., Ltd.

Address:A3 Building, No. 3655 Sixian Road, Songjiang Shanghai 201614. Tel: +86 21 5677 7777 Fax: +86 21 5677 7777 Email: global-sales@chintglobal.com Website: www.chintglobal.com

Singapore | Asia Pacific HQ

CHINT Global Pte Ltd

Address: 8 Kallang Avenue, #04-06/09 Aperia Office Tower 1, Singapore 339509. Tel: +65 6329 3110 Fax: +65 6329 3159 Website: www.chintglobal.com

Sunlight Electrical Pte Ltd

Address: 1 Third Chin Bee Road, Singapore 618679. Tel: +65 6741 9055 Fax: +65 6265 4586 Email: sales@sunlightgroup.com Website: www.sunlightgroup.com

India

CHINT India Energy Solution Private Limited

Address: Discovery Tower, Plot No. A-17, Ground Floor Industrial Area Sector 62 Noida, India 201309. Tel: +91 1202 9750 57 Email: marketing@chint.co.in Website: www.chint.co.in

Philippines

CHINT Electric Co., Ltd

Address: Unit 201, Taipan Place, F. Ortigas Jr. Road, Ortigas Center, Pasig City, Address: Onli 201, Talpan Piace, F. Orligas Jr. Rodd, Orlig Metro Manila, Philippines. Tel: +63 967 273 0174 / +63 977 017 6320 Email: liq07@chintglobal.com / wencell@chintglobal.com Website: www.chintglobal.com

Latin America

Brazil

CHINT Elétricos América do Sul Ltda.

Add: Av. Paulista, 1765 - Edifício Scarpa - Conjunto 22 , Bela Vista - CEP 01311-200 - São Paulo - SP Tel.: +55 (11) 3266-7786 E-mail: chintbr@chint.com

Peru

CHINT LATAM (PERU) S.A.C.

Add: Av. Camino Real No.348, Torre El Pilar, Oficina 603, San Isidro, Lima 27, Peru Tel: +51 1 763 4917 Email: chintlatamperu@chint.com

Indonesia

PT. CHINT Indonesia

Address: Kompleks Prima Center I, Blok C9-10, Jl. Pesing Poglar Jl. Pool PPD No. 11, RT.9/RW.2, Cengkareng, Jakarta Barat. Tel: +62 21 5436 3000 Email: sales@chint-indonesia.com Website: www.chint-Indonesia.com

Vietnam

CHINT Vietnam Holding Co., Ltd

Address: So 2Bis-4-6, Le Thanh Ton, P. Ben Nghe Quan 1, Ho Chi Minh, Vietnam. Tel: +84 0283 8270 015 Email: marketing.vn@chintglobal.com Website: www.chintglobal.vn

Sunlight Electrical (VN) Co., Ltd

Address: 20 Doc Lap Ave, VSIP, Thuan An City, Binh Duong Province, Vietnam. Tel: +84 0274 3743 505 Email: sales.sev@sunlightgroup-vn.com.vn Website: www.sunlightvetnam.com.vn

Cambodia

CHINT (Cambodia) Power Equipment Co., Ltd

Address: No.15, St. 542, Sangkat Boeung Kok 1, Khan Toul Kork, Phnom Penh, Cambodia. Tel: +855 23 231 077 Email: Ibin3@chintglobal.com Website: www.chintglobal.com

SchneiTec CHINT Co., Ltd

Address: Ansor Kdam Village, Sna Ansa Commune, Krakor District, Pursat Province, Tel: +855 09 5353 268 Email: liubin@schneitec-chint.com.kh / info@schneitec-chint.com.kh Website: www.schneitec-chint.com.kh

Ecuador CHINT ELECTRICS (HONG KONG) LIMITED (Ecaudor Branch)

Add.: Calle: REP.DEL SALVADOR Número: 10-84 Intersección: AV NACIONES UNIDAS Edificio: CENTRO COMERCIAL MANSION BLANCA