



Product Data Sheet

OPCAELINK

The Klinkmann **OPCAELINK** is a Microsoft Windows 32-bit application program for distributing alarms from **OPC Alarm&Event** (A&E) Servers to **Wonderware** Distributed Alarm System, primarily to Wonderware InTouch (7.11 ... 10.1) Alarm Consumers. The OPCAELINK consists of two parts:

- **OPC A&E Client** part, providing OPC A&E interface with OPC A&E Servers.
- **Wonderware Alarm Provider** part, providing COM interface to Wonderware Distributed Alarm System; this part is implemented by Wonderware Distributed Alarm Toolkit.

The OPCAELink combines OPC A&E Client and Wonderware Alarm Provider functionality in one application and is designed to be a gateway between OPC A&E Servers and Wonderware Distributed Alarm System. OPCAELINK can work on same Microsoft Windows platforms (NT, 2000, XP) where Wonderware Distributed Alarm System can work.

Note*

To support the acknowledging of alarms, the **OPCAELink.tlb** file (not included in OPCAELink installation) should be copied to same directory where OPCAELink was installed and then registered by

```
regtlib OPCAELink.tlb
```

or

```
regtlibv12 OPCAELink.tlb
```

```
command.
```

ORDERING INFORMATION

Description / Order Number

OPCAELINK Manual & Disk Set / PR 115 10



www.klinkmann.com

Helsinki

tel. +358 9 540 4940
automation@klinkmann.fi

St. Petersburg

tel. +7 812 327 3752
klinkmann@klinkmann.spb.ru

Moscow

tel. +7 495 641 1616
moscow@klinkmann.spb.ru

Yekaterinburg

tel. +7 343 287 19 19
yekaterinburg@klinkmann.spb.ru

Samara

tel. +7 846 273 95 85
samara@klinkmann.spb.ru

Kiev

tel. +38 044 495 33 40
klinkmann@klinkmann.kiev.ua

Riga

tel. +371 6738 1617
klinkmann@klinkmann.lv

Vilnius

tel. +370 5 215 1646
post@klinkmann.lt

Tallinn

tel. +372 668 4500
klinkmann.est@klinkmann.ee

Minsk

tel. +375 17 200 0876
minsk@klinkmann.com